

## Pocket Album Deluxe OLED 2.8

### 2.8" digital photo viewer

#### Quick Start Guide



### DIGITAL FOCI

Thank you for choosing Digital Foci.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ♦ Easy-to-use products to help you manage and enjoy your digital content
- ♦ Attractive products to accentuate your unique style
- ♦ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Pocket Album Deluxe OLED and other products from Digital Foci, please visit our website at:

[www.digitalfoci.com](http://www.digitalfoci.com)

Congratulations on purchasing your Pocket Album Deluxe OLED 2.8 - 2.8" digital photo viewer.

The cutting edge OLED technology provides superior image quality with higher brightness, better contrast, and wider viewing angles.

Share and relive your precious photo memories anytime, anywhere with Pocket Album Deluxe OLED 2.8. Run automatic photo slideshows with random option and adjustable interval. Pocket Album OLED runs on a rechargeable Lithium-Polymer battery with approximately 5 hours of battery life and can hold over 4,000 images.

#### System Requirements for Photo Manager Software:

- 1) Computer running on:
  - ♦ Windows Vista, XP, 2000
  - ♦ Macintosh OS 10.5 & 10.4
- 2) One available USB Port

#### Care for Pocket Album Deluxe OLED:

- ♦ Do not expose Pocket Album Deluxe OLED to liquids, moisture, or precipitation.
- ♦ Do not drop, jar, bump, shock, or expose Pocket Album Deluxe OLED to severe vibration.
- ♦ Do not store or use the device in conditions where the temperature is below -22°F (-30°C) or above 158°F (70°C).
- ♦ For best battery life, make sure to periodically recharge your Pocket Album Deluxe OLED to prevent the battery from becoming completely depleted.

### Package Contents:

- ♦ Pocket Album Deluxe OLED 2.8
- ♦ USB cable
- ♦ AC power adapter
- ♦ Photo Manager Software
- ♦ Wrist strap
- ♦ Carrying case
- ♦ Acrylic viewing stand
- ♦ Quick Start Guide

### Technical Specifications

|                                 |  |
|---------------------------------|--|
| Model no.                       | PAD-280  |
| Display                         | 2.8" Active Matrix OLED (Organic Light-Emitting Diode) Screen  |
| Screen resolution               | 320 x 240 pixels   |
| Viewing area                    | 2.8" diagonal (2.3" x 1.7")  |
| Viewing angle                   | 170 degrees horizontal & vertical  |
| Brightness (cd/m <sup>2</sup> ) | 200 nits   |
| Contrast ratio                  | 10,000:1   |
| Image capacity                  | Over 4,000 images  |
| Internal memory                 | 128 MB   |
| Image format support            | JPG, TIF, GIF, PNG, BMP <i>(Note: photos must be transferred from computer via Photo Manager Software)</i> |
| Slideshow options               | Manual slideshow & Auto slideshow  |
| Photo display options           | Full screen, 3 x 3 thumbnail view, 2 x 2 view, calendar with photo   |
| Slideshow intervals             | Adjustable from 5 seconds to up to 15 minutes  |
| Random option                   | Yes  |
| Multiple transition effects     | Yes (5 effects)  |
| Folder management               | Yes (5 folders available)  |
| Battery power                   | Built-in rechargeable (by USB or AC) Lithium-Polymer battery   |
| Battery life                    | Approximately 5 hours  |
| On board clock & calendar       | Yes  |
| Auto off                        | Yes (off, 5 minutes up to 30 minutes)  |
| Power                           | AC100-240V to DC 5V/1A   |
| Computer interface              | USB 1.1  |
| OS compatibility                | Windows Vista, XP, 2000<br>Mac 10.5 & 10.4   |
| Software                        | Photo Manager Software for converting images   |
| Dimensions                      | 3.3" (L) x 2.7" (W) x 0.6" (H)   |
| Weight                          | 3.6 oz.  |

#### Learn More

Visit [www.digitalfoci.com/support](http://www.digitalfoci.com/support) to download User's Guide and get answers to Frequently Asked Questions.

#### Register your Product

Visit [www.digitalfoci.com/registration](http://www.digitalfoci.com/registration) to register your product. You will be notified about any important updates for your Pocket Album Deluxe OLED 2.8.

#### Technical Support

If you have any questions about using your Pocket Album Deluxe OLED 2.8, please contact Tech Support by email at [support@digitalfoci.com](mailto:support@digitalfoci.com) or call 310-763-9100 or toll-free 1-888-NOW-FOCI (669-3624).

### Device Layout

#### Front View



#### Top View



Push **Lever Switch** LEFT/RIGHT:  
Move cursor left/right or up/down  
Select previous/Next

Push **Lever Switch** DOWN (ENTER):  
Select/deselect highlighted Menu item  
Start/pause slideshow  
Confirm value change

### Powering Pocket Album Deluxe OLED

#### Powering On/Off Pocket Album Deluxe OLED

To turn on Pocket Album Deluxe OLED, press the Power Button. The Power LED will turn green and the Digital Foci screen will appear while the device initializes and powers on.

To turn off Pocket Album Deluxe OLED, press and hold the Power Button for 5 seconds. Pocket Album Deluxe OLED will show the message "Power Off" before turning off.

#### Power Indicator LED

The power indicator LED indicates the following power status:

**Green:** Pocket Album Deluxe OLED is powered on.

**Red - Flashing:** Device battery is charging.

**Red - Solid:** Device battery has been fully charged.

#### Charging Pocket Album Deluxe OLED Battery

Pocket Album Deluxe OLED has a battery life of approximately 5 hours on a full charge. You can charge the battery either by the included AC power adapter or by USB power from your computer.

It takes about 4 hours to fully charge Pocket Album Deluxe OLED when the battery is completely empty. The battery will charge much more quickly if the device is turned off.

#### Charging the Battery by AC Adapter

1. Plug the AC power adapter into a wall outlet. The Red LED will light up, indicating it is plugged in.
2. Connect Pocket Album Deluxe OLED to the AC adapter with the USB cable. The Red LED on Pocket Album Deluxe OLED will be flashing, indicating that it is charging.
3. If Pocket Album Deluxe OLED is turned on, turn it off to make the battery charge faster.
3. With the device turned off, it takes about 4 hours to fully recharge an empty battery. The Red LED will turn solid when the battery is fully recharged.

#### Charging the Battery by Computer USB Port

1. Connect Pocket Album Deluxe OLED to your computer with the USB cable.
2. Pocket Album Deluxe OLED will automatically turn on and show the "USB Connected" message on its screen. The Red LED will be flashing to indicate that it is charging. Note that the device cannot be turned off while it is connected to your computer.
3. It takes approximately 6 hours to fully recharge the battery by USB power.

 
#### Battery Saving Features

Pocket Album Deluxe OLED has two power saving features to conserve battery power.

1. **Screen Saver:** If no button has been pressed and there is no activity for 20 minutes, the screen saver screen will be displayed. Pressing any button will turn the screen back on. The screen saver will be disabled when the device is running a photo slideshow.
2. **Auto-off Timer:** By default, if no button has been pressed and there is no activity for 5 minutes, Pocket Album Deluxe OLED will automatically turn off. This Auto Off feature will be temporarily disabled when the device is connected to the computer by USB. You can adjust the Auto-off Timer (None, 5, 10, 15, and 30 minutes) to best match your needs by accessing the Setup option.

### Device Overview

#### Home Screen - Main Navigation Screen

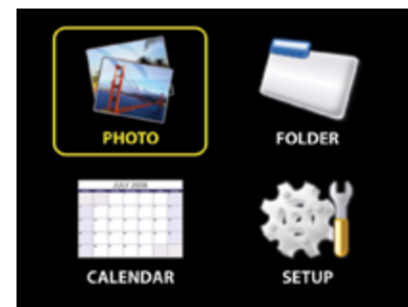

From the Home screen, you can select one of these options:

- ♦ **PHOTO:** View all photos on the device in Photo Thumbnail View.
- ♦ **FOLDER:** View photos by folder in Folder Thumbnail View.
- ♦ **CALENDAR:** Go to Calendar View.
- ♦ **SETUP:** Access Setup options.


Press **HOTKEY** to start playing a photo slideshow of all photos on the device according to your slideshow settings.

Press **MENU** to access Device Information under Setup. This screen shows you the number of photos stored on your Pocket Album Deluxe OLED in each folder, and the remaining space on the Internal Memory.

### Setting Up Pocket Album Deluxe OLED

#### Accessing Setup Options

From the Home screen, press **RIGHT** to move the cursor to SETUP. Next, press **ENTER** to access Setup options.

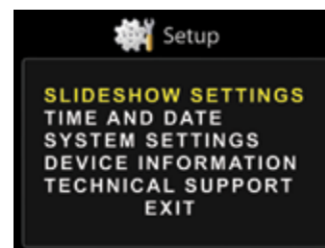

Press **LEFT/RIGHT** to move the cursor up/down. Press **ENTER** to access the selected SETUP option.

To exit Setup menu, press **ESC** or select **EXIT**.

#### Changing Values Under Setup Options

Follow these instructions to change the settings:

1. Press **LEFT/RIGHT** to move the cursor up/down.
2. With the desired option highlighted, press **ENTER** to select the value for changing. The selected value will flash, indicating that you can change the value.
3. Press **LEFT/RIGHT** to change the value. When you are done, press **ENTER** to confirm your setting. The highlight will return to solid instead of flashing.
4. To exit, press **ESC** to return to the main Setup screen.

#### Setup Option - Slideshow Settings



Select **Auto Start** to set the Auto-Start mode:

- ♦ **All:** Automatically starts playing all photos in a slideshow when device is powered on.
- ♦ **Folder 1-5:** Automatically starts playing photos in the selected folder in a slideshow when powered on.
- ♦ **Off:** Does not automatically start a slideshow when powered on. The HOME screen will be displayed.

Select **Display** to change the display between **Full Screen View** and **2x2 view**.

Select **Interval** to adjust the time interval between each photo during the photo slideshow.

Select **Play Mode** to change among:

- ♦ **Repeat:** Play photos in sequential order in a continuous loop.
- ♦ **Random:** Play photos in random order in a continuous loop.
- ♦ **Once:** Play photos in sequential order once. Slideshow will stop at the end of the last photo.

Select **Transition** to change the transition effect of the slideshow. Select **Clock Display** to show or hide time and date while playing the slideshow.

#### Setup Option - Time and Date

To set the time:

1. With **Time** highlighted, press **ENTER**. As the hour field is flashing, press **LEFT/RIGHT** to change the hour. Make sure the AM and PM setting is correct. When the correct hour is selected, press **ENTER** to move to the minute field.
2. Next, with the minute field flashing, press **LEFT/RIGHT** to change the minute. Press **ENTER** to confirm the setting.

To set the date:

1. Navigate to **Date** and press **ENTER** to start changing the values. The date is displays in this format: MM/DD/YYYY.
2. For each field, press **LEFT/RIGHT** to change the value. Press **ENTER** to confirm each setting.

#### Setup Option - System Settings

Select **Auto-off** to set the Auto-off Timer. This is a battery saving feature. By default, if no button has been pressed for 5 minutes, the device will automatically turn off. You can adjust the Auto-off Timer among 5, 10, 15, and 30 minutes. You can also select **None** to disable this feature.

This feature will be temporarily disabled when the device is connected to the computer by USB.

Select **Reset to Default** to reset all settings to default settings. This option will also reset the time and date.

#### Setup Option - Device Information

The **Device Information** screen shows you the number of photos stored on your Pocket Album Deluxe OLED in each folder, and the remaining space on the Internal Memory.

## Viewing All Photos on Pocket Album Deluxe OLED

From the Home screen, you can press **HOTKEY** to start playing a photo slideshow of all photos on the device according to your slideshow settings.

You can also select **PHOTO** from the Home screen to access the Photo Thumbnail View.

In Photo Thumbnail View, all photos on the device will be shown in a 3 by 3 matrix of photo thumbnails.

- Press **HOTKEY** to skip to the next page of photo thumbnails.
- Press **MENU** and select to go to the previous/next page.
- Press **ENTER** to start a slideshow of all photos, starting from the photo that is highlighted.



Highlighted photo: Shown in green box

Photo X of total # photos Page X of total # pages

### Changing Slideshow Options

While the photo slideshow is playing, you can change the display option, slideshow interval, play mode, transition effects, and clock display.

Press **MENU** to access the Menu option. To cancel and close Menu, press **MENU** again.

### Changing display option:

Press **MENU** and select to change the current display setting between *Full Screen View* and *2x2 View*.



Full Screen View 2 x 2 View

### Changing slideshow interval:

You can adjust the slideshow interval among: 5, 15, 30 seconds; and 1, 5, 10, 15 minutes.

As the slideshow is playing, press **RIGHT** or **LEFT** to increase or decrease the time interval between photo transitions. You can also change the setting under Menu option. Press **MENU** and select *Interval*. Next, press **RIGHT/LEFT** to change the interval. Press **ENTER** to confirm the setting.

### Changing slideshow play mode:

As the slideshow is playing, press **HOTKEY** to toggle among these play modes:

- **Repeat:** Play photos in sequential order repeatedly in a continuous loop.
- **Random:** Play photos in random order.
- **Once:** Slideshow will stop at the end of the last photo and display will return to Home screen.

You can also change the setting under Menu option. Press **MENU** and select *Play Mode*. Next, press **RIGHT/LEFT** to change the play mode. Press **ENTER** to confirm the setting.

### Changing transition effects:

You can change the transition effects among:

- **None:** No effect
- **All:** Goes through all 5 effects in order
- **Effect 1:** Wipe from top to bottom; wipe from bottom to top
- **Effect 2:** Blinds from top; blinds from bottom
- **Effect 3:** Open from middle to top and bottom; close from top and bottom to middle
- **Effect 4:** Scroll up; scroll down
- **Effect 5:** Slow wipe from top to bottom; slow wipe from bottom to top
- **Random:** Selects Effect 1 - Effect 5 randomly

Press **MENU** and select *Transition*. Next, press **RIGHT/LEFT** to change the setting. Press **ENTER** to confirm the setting.

### Changing clock display:

You can select among the following clock display settings while playing the slideshow: Hide time and date, Show both time and date, Show date only, and Show time only.

Press **MENU** and select *Clock Display*. Next, press **RIGHT/LEFT** to change the setting. Press **ENTER** to confirm the setting.

You can also press **ENTER** to pause the slideshow, and then press **HOTKEY** to toggle the clock display options. Press **ENTER** again to resume the slideshow.

### Scrolling Through Photos Manually

While a photo slideshow is playing, you can view a particular photo by pressing **ENTER** to pause the slideshow.

While the slideshow is paused, press **RIGHT/LEFT** to manually scroll to the next/previous photo. The Pause symbol will flash at the bottom of the screen to indicate that the slideshow is paused.

Press **ENTER** again to resume the slideshow.

### Deleting Photos

You can delete a photo either in Photo Thumbnail View or during a photo slideshow.

#### Deleting a photo in Photo Thumbnail View:

1. Scroll to the photo you want to delete.
2. With the selected photo highlighted, press **MENU** and select *Delete Photo*.
3. The device will ask for your confirmation. Select *No* to cancel and select *Yes* to confirm the deletion.

#### Delete a photo during a slideshow:

1. When the slideshow is playing, pause the slideshow by pressing **ENTER**. While the slideshow is paused, you can press **RIGHT/LEFT** to manually scroll to the next/previous photo.
2. As the photo to be deleted is displayed, press **MENU** and select *Delete*.
3. The device will ask for your confirmation. Select *No* to cancel and select *Yes* to confirm the deletion.

## Viewing Photos in Folder View

Selecting **FOLDER** from the Home screen lets you view photos by folder. You can organize your photos in a total of 5 different folders.

- In Folder Thumbnail View, all available photos in the selected folder will be shown in a 3 by 3 matrix of photo thumbnails.
- Press **HOTKEY** to skip to the next page of photo thumbnails.
  - Press **MENU** and select to go to the previous/next page.
  - Press **ENTER** to start a slideshow of all photos in the selected folder, starting from the photo that is highlighted.



Current Folder

Highlighted photo: Shown in green box

Photo X of total # photos Page X of total # pages

### Viewing Different Folders

When you select **FOLDER** from the Home screen, you will be taken to Folder Thumbnail View of Folder 1.

To view a different folder:

1. Press **MENU** and select *Change Folder*.
2. Next, select the folder you would like to view.

### Copying and Moving Photos Between Folders

You can copy or move a photo from one folder to another folder in Folder Thumbnail View.

When you copy a photo, the device will make a copy of the photo so that same photo will be in both the original and target folders. If you move a photo, the photo will be moved to the target folder and deleted from the original folder.

1. Scroll to the photo you'd like to copy or move.
2. With the selected photo highlighted, press **MENU** and select *Copy to Folder* or *Move to Folder*.
3. Next, select the folder you'd like to copy or move the photo to.
4. The device will show the confirmation message 'File Copy' or 'File Move' while it copies or moves the photo.

### Deleting Photos In Folder View

You can delete a photo in Folder Thumbnail View:

1. Scroll to the photo you'd like to delete.
2. With the selected photo highlighted, press **MENU** and select *Delete Photo*.
3. The device will ask for your confirmation. Select *No* to cancel and select *Yes* to confirm the deletion.

 
### Deleting Folder

You can delete an entire folder in Folder Thumbnail View:

1. Select to view the folder you'd like to delete.
2. Press **MENU** and select *Delete Folder*.
3. The device will ask for your confirmation. Select *No* to cancel and select *Yes* to confirm the deletion.
4. All photos in the selected folder will be deleted.

## Displaying Calendar

Selecting **CALENDAR** from the Home screen takes you to the Calendar View.

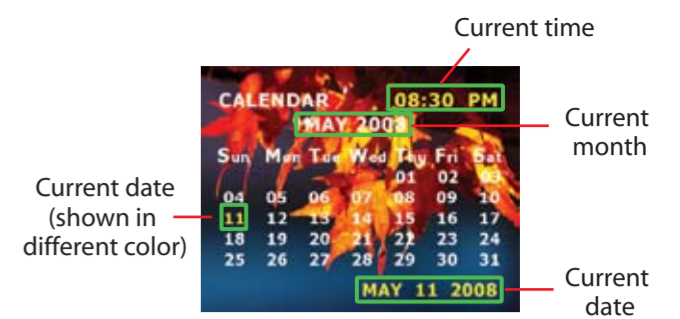

### Running Photo Slideshow with Calendar

In Calendar View, you can view the calendar with your photos running in a slideshow in the background.

- Press **RIGHT/LEFT** to scroll to the next/previous photo.
- Press **MENU** to change the slideshow interval, play mode, transition effect, and clock display.
- Press **HOTKEY** to toggle between photo background and black background.

### Browsing Through Calendar

You will be able to browse through the calendar.

- To browse through the calendar, first press **ENTER** to pause the slideshow.
- While the slideshow is paused, press **RIGHT/LEFT** to scroll to the next/previous month.
- Press **ENTER** again to resume the slideshow. Note that the calendar displayed will be the last month viewed.

## Resetting Pocket Album Deluxe OLED

In the case that Pocket Album Deluxe OLED encounters an error and freezes, you can reset it by connecting it to the computer or AC power adapter via USB. You will not lose any photos saved on your Pocket Album Deluxe OLED.

## Pocket Album Deluxe OLED Accessories

Pocket Album Deluxe OLED comes with the following accessories that help you get the most out of it:

- **A wrist strap** makes it convenient to carry your Pocket Album Deluxe OLED with you.
- **A carrying case** protects the device from bumps and scratches during transport.
- **An acrylic viewing stand** allows easy desktop display.

## Adding Photos to your Pocket Album Deluxe OLED

**Photo Manager Software** is the image conversion tool required for transferring photos from the computer to your Pocket Album Deluxe OLED. The software lets you crop and edit the images before automatically resizing them for optimal storage and display on your device.

### IMPORTANT NOTE:

While Pocket Album Deluxe OLED can be accessed on the on the computer directly as a removable drive, photos will display on the Pocket Album Deluxe OLED **ONLY IF** they are transferred via the Photo Manager Software.

After the images are properly processed by the software and transferred to the Pocket Album Deluxe OLED, you will be able move them to different folders or to a different Pocket Album Deluxe OLED via the computer.

Also, make sure not to alter the names of the default folders labeled FOLDER1 through FOLDERS. These folders contain the photos that will display on your device.

### Installing Photo Manager Software - Windows

1. Connect Pocket Album Deluxe OLED to your computer by USB. The device will show as a removable disk named "PAD-280" under My Computer.
2. Double-click the "PAD-280" drive to open up your Pocket Album Deluxe OLED, and navigate to: \PAD-280\SYSTEM\Photo\_Manager\_Software\WINDOWS\
3. Run the "PAD-280\_Photo\_Viewer.exe" installation file.
4. The "Pocket Album Deluxe OLED 2.8 Photo Viewer - InstallShield Wizard" Window will open up. Click *Next*.
5. Next, click *Install* to start the installation.
6. When the installation is complete, click *Finish*.
7. A "PAD-280 Photo Manager" software icon will be installed on the desktop.

### Installing Photo Manager Software - Mac

1. Connect Pocket Album Deluxe OLED to your computer by USB. The device will show as a removable disk named "PAD-280" on the desktop.
2. Double-click the "PAD-280" icon to open up your Pocket Album Deluxe OLED, and navigate to: \PAD-280\SYSTEM\Photo\_Manager\_Software\MAC\
3. Run the "PAD-280 Photo Viewer 3.1.dmg" installation file.
4. Double-click the "PhotoViewer 3.1" icon on the desktop.
5. The "Photo Viewer 3.1 MAC OS" window will open up. Double-click *Photo Viewer Install 3.1*.
6. The "Install Photo Viewer Install 3.1" Window will open open. Follow the on-screen instructions and click *Install* to start the installation.
7. A "Photo Viewer" icon will be installed on the desktop.

### Running Photo Manager Software

**IMPORTANT:** Before starting Photo Manager Software, you must first connect Pocket Album Deluxe OLED to your computer. The device will turn on automatically and display a "USB Connected" message on the screen.

- **For Windows:** Double-click the "PAD-280 Photo Viewer" icon on the desktop; or go to Programs from the Start Menu, and click on *Pocket Album Deluxe OLED 2.8 > PAD-280 Photo Viewer*.
- **For Mac:** Double-click the "PhotoViewer" icon on the desktop; or go to Applications from Finder, and click on *PhotoViewer*.

The Photo Manager Software screen will open up.

## Photo Manager Software Screen Overview

### Screen Shot - Windows



- 1 Current directory path
- 2 Folder directory on computer
- 3 Select default thumbnail display
- 4 Thumbnails of images in selected folder
- 5 Click to add highlighted image as shown in the Browser Window to Collection Panel
- 6 Click to crop and edit image (Opens Crop Photo Window)
- 7 Collection Panel: Images to be transferred

### Photo Manager Software Screen Overview

There are 3 main sections on the Photo Manager Software screen:

- The section on the left is the **Browser Window**, where you can browse through the photos on your computer, and select and edit the photos to be added to your device.
- The section in the middle is the **Collection Panel**, where you can prepare the photos to be transferred to your device.
- The section on the right is the **Device Window**, which displays, by folder, the photos that are currently on the device. Photos that are currently on your device will automatically load and be displayed here when it is connected to your computer.

### Selecting Images to Convert/Transfer

1. Under the **Device Window**, select the folder (Folder1 through Folder5) (1) to where you would like to transfer the photos.
2. Under **Browse for Images** (2), browse through your computer to select the images you want to transfer. Your current directory path is shown in (1).

**TIP:** Common photo storage locations:

- **Windows XP users:** Browse C:\Documents and settings\ (Username)\My documents\My Pictures
  - **Windows Vista users:** Browse C:\(Username)\Pictures
  - **Mac users:** Browse **iPhoto Library** (for example: \Users\ {Username}\Pictures\iPhoto Library)
3. As you browse different folders, thumbnails of photos in the selected folder will be displayed (4). You can choose (3) to display either the *Whole Image* (in letter box if it is not a 4:3 aspect ratio size) or select *Fit for Display* (which will crop the photo to a 4:3 aspect ratio size).
  4. Click on the thumbnail of the image you want to transfer to highlight it. If you would like to add the photo as it is shown, click *Add Selected Photo to Collection Panel* (5) for transfer.

### Screen Shot - Mac



- 8 Device Window: Images currently on device
- 9 Current Folder
- 10 Remaining memory space available
- 11 Remove selected/all images from Collection Panel
- 12 Remove selected/all images from device
- 13 Transfer files from Collection Panel to device
- 14 Close Photo Manager Software

### Editing/Cropping Images before Converting

To edit an image, click *Optimize and Crop Selected Photo* (6) while you have the photo highlighted. This will open up the **Crop Photo Window** as shown on the right.

- Click and drag one of the corners of the crop box (17) to adjust the size of the crop box.
- Click and drag the box to move the positioning of the box.
- Click the rotate buttons (18) to rotate the image.
- Adjust the brightness and contrast of the image by moving the corresponding slider setting (19).
- Click *Done* to add the edited image to the **Collection Panel**.

### Checking Available Memory Space

Pocket Album Deluxe OLED has about 110 MB free Internal Memory for storing over 4,000 converted images. The available memory space is indicated at the top right hand corner (10).

### Removing Images from the Collection Panel

- You can remove selected images from the **Collection Panel** before transferring them to your Pocket Album Deluxe OLED.
- Click *Remove Selected Photo From the Collection Panel* (11) to remove the highlighted photo(s).
  - Click *Remove All Photos From the Collection Panel* (12) to remove all photos from the **Collection Panel**.

### Removing Images from the Device Window

- You can delete photos that are currently stored on your device.
- Click *Delete Selected Photo On Your Device* (13) to delete the highlighted photo(s) from your Pocket Album Deluxe OLED.
  - Click *Delete All Photos Stored On Your Device* (14) to delete all photos in the selected folder from your device.

### Crop Photo Window



- 17 Crop Box
- 18 Rotate image 90°
- 19 Adjust brightness & contrast
- 20 Add edited image to Collection Panel

### Updating Images on Pocket Album Deluxe OLED

When you are ready to transfer the images shown in the **Collection Panel** to your Pocket Album Deluxe OLED, click *Transfer the Collection to Your Device* (15).

Do not disconnect the device from your computer during the transfer. During the transfer, an "Updating photos, please wait..." message will be shown on your computer.

Once the transfer is complete, the converted images will be updated in the **Device Window**.

Make sure to safely disconnect your Pocket Album Deluxe OLED before unplugging it from the computer.

- **Windows:** Click on 'Safely Remove Hardware' icon to disable the device.
- **Mac:** Properly eject the device by dragging the "PAD-280" icon into the Trash Can.