

Pocket Album

1.5" keychain digital photo viewer

User's Guide



DIGITAL
FOCI

Thank you for choosing Digital Foci.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ♦ Easy-to-use products to help you manage and enjoy your digital content
- ♦ Attractive products to accentuate your unique style
- ♦ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Pocket Album and other products from Digital Foci, please visit our website at:

www.digitalfoci.com

Congratulations on purchasing your Pocket Album - 1.5" keychain digital photo viewer.

Share and relive your precious memories anytime, anywhere with Pocket Album. Pocket Album runs on battery power with up to 9 hours of battery life and can hold up to 74 images.

Pre-load your favorite photos on Pocket Album and give it to your friends or family as the perfect sentimental gift.

Computer System Requirements:

- 1) Computer running on:
 - ♦ Windows Vista, XP, 2000
 - ♦ Macintosh OS 10.x & later
- 2) CD-ROM
- 3) One available USB Port


Care for Pocket Album:

- ♦ Do not expose Pocket Album to liquids, precipitation, or moisture.
- ♦ Do not drop, jar, bump, shock or expose Pocket Album to severe vibration.
- ♦ Do not touch the LCD screen with sharp objects or or extend excess pressure or force on the screen.
- ♦ Use soft cloth to clean the LCD screen; do not use intense cleanser.

Package Contents:

- ♦ Pocket Album
- ♦ USB cable
- ♦ USB-AC power adapter
- ♦ User's Guide
- ♦ Resource Disc with Photo Viewer Software

Device Layout

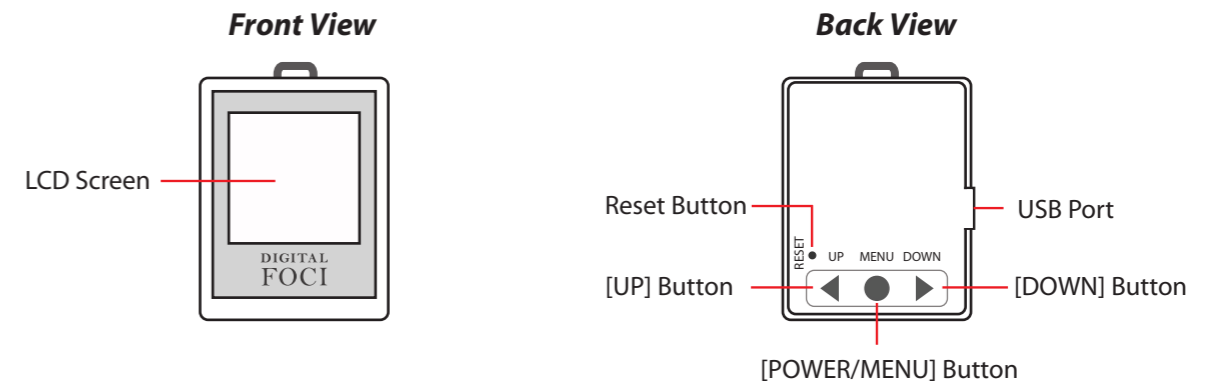

Technical Specifications

Model no.	PAL-015
LCD display	1.5" LCD screen
Screen resolution	128 x 128 pixels
Internal memory	8MB (can hold up to 74 pictures depending on picture size)
Image format support	JPG, BMP (<i>Note: photos must be transferred via Photo Viewer Software</i>)
Slideshow options	Manual slideshow & Auto slideshow
Slideshow intervals	Adjustable from 5 seconds up to 2 minutes
LCD contrast adjustable	Yes
Battery power	3.7V 210mAh built-in rechargeable Lithium-Ion battery Rechargeable via USB or USB-AC power adapter
Battery life	Up to 9 hours
External power	110-240V AC to 5V/200mA-300mA DC
On board clock	Yes
On/off timer	Yes
Computer interface	USB 2.0 (compatible with USB 1.1)
OS compatibility	Windows Vista, XP Home/Pro, 2000 Mac 10.x & later
Software	Photo Viewer Software for converting JPG & BMP images
Dimensions	2.2" (L) x 1.6" (W) x 0.5" (H)
Weight	1.2 oz.

Technical Support

If you have any questions about using your Pocket Album, please contact Digital Foci technical support by email at: support@digitalfoci.com or call 1-888-NOW-FOCI.

FAQs

Check the Digital Foci website (www.digitalfoci.com) for Frequently Asked Questions and additional tips.

Powering On/Off Pocket Album

To turn on Pocket Album, press and hold the [MENU] button located on the back of the device for 5 seconds. The Pocket Album screen will turn on.

To turn off Pocket Album, press the [MENU] button to access the Menu screen. Select **OFF** by pressing the [MENU] button again.

Charging Pocket Album Battery

Pocket Album has a battery life of up to 9 hours on a full charge. You can charge the battery either by the included USB-AC power adapter or by USB power from your computer.

Pocket Album will display a "battery low" warning when the battery is running low. The battery should be recharged. It takes about 2 hours to fully charge an empty battery on Pocket Album.

Charging Pocket Album by USB-AC adapter

1. Plug the USB-AC power adapter into a wall outlet. The Red LED will light up, indicating it is plugged in.
2. Connect the larger end of the included USB cable to the USB port on the USB-AC adapter. Connect the smaller end to the USB port on your Pocket Album.
3. On Pocket Album you will see 2 options: *USB Charge* and *USB Update*. Select **USB Charge** to start charging the device.
4. The Green LED on the USB-AC adapter will light up, indicating Pocket Album is charging.
5. When Pocket Album is fully charged, the Green LED will go off to indicate that the battery is full.

Charging Pocket Album by USB

1. Connect Pocket Album to your computer with the USB cable.
2. On Pocket Album you will see 2 options: *USB Charge* and *USB Update*. Select **USB Charge** to start charging the device.

Viewing Photos on Pocket Album

Press the [MENU] button on Pocket Album to access the device Menu. Next, press the [UP] and [DOWN] buttons to move the selection arrow up and down. Press [MENU] to make your selection.

OFF

Select **OFF** to turn off Pocket Album.

Display Mode

Select **Display Mode** to set *Auto Slide* or *Manual Slide* for the slideshow playback mode.

Auto Slide: Photos will advance automatically based on the time interval setting (default is 5 seconds). After selecting *Auto Slide*, you can adjust the slideshow time interval from 5 seconds up to 120 seconds by pressing the [UP] and [DOWN] buttons. Press and hold the buttons to increase the speed of the adjustment.

Manual Slide: Press the [UP] and [DOWN] buttons to manually change the photo displayed on the screen.

Clock Set

Select **Clock Set** to set date and time on Pocket Album. Adjust time by pressing the [UP] and [DOWN] buttons. Press the [MENU] button to navigate to the next field.

NOTE: The system clock is displayed as: YYYY-MM-DD, followed by HH : MM : SS using a 24-hour clock.

Auto ON/OFF

Select **Auto ON/OFF** to enable or disable the timer.

Auto ON/OFF On: Select to enable the On/Off timer. Press the [UP] and [DOWN] buttons to set the desired time for Auto On and Auto Off. Press the [MENU] button to navigate to the next field.

Auto ON/OFF Off: Select to disable the On/Off timer.

Clock Display

Select **Clock Disp** to hide or show the clock.

Disp Clock Normal: Select to show the system clock on full screen instead of showing the photos. Press the [MENU] button again to return to photos.

Disp Clock Water Mark: Select to show the system clock on the screen along with the photo display.

LCD Contrast

Select **LCD Contrast** to adjust the brightness level of the screen.

Adjust the screen contrast level by pressing the [UP] and [DOWN] buttons. The higher the value, the brighter the screen and the higher the optimal viewing angle. Select the best viewing angle for your use. You can adjust the contrast level between 0 and 16.

Delete

With the selected photo on display, you can access the Menu and select **Delete** to delete the current photo. You will see the confirmation screen with No and Yes options. Select **No** to cancel the deletion and select **Yes** to confirm the deletion.

Exit

Select **Exit** to exit from Menu and return to normal operation.

Resetting Pocket Album

In the case that Pocket Album encounters an error and freezes, you can reset it by pressing the [RESET] button on the back of the device using a pointy object such as a paper clip. The settings will be reset to factory default. You will not lose any pictures saved on Pocket Album.

Adding Photos to your Pocket Album with Photo Viewer Software

About Photo Viewer Software

Photo Viewer Software is a picture conversion tool required to import photos to display on your Pocket Album.

Run Photo Viewer Software to transfer JPG or BMP images from your computer to Pocket Album. Photo Viewer Software lets you crop and rotate the images you wish to transfer, before automatically resizing them for optimal storage and display on Pocket Album.

Tips for Selecting Photos for Pocket Album

Here are some tips to help you create the best images from your photos to display on the 1.5" Pocket Album screen:

1. Start with high-resolution images. These images will result in better image quality when cropped.
2. Select images with less complex backgrounds.
3. Crop photos to show face shots or close-ups.

* Contact Digital Foci Tech Support if you need further assistance.

Installing Photo Viewer Software

Insert and run the Resource Disc on your computer CD-ROM.

For Windows: Locate and run "**PhotoViewer.exe**" inside the "Windows" folder. Follow the on-screen instructions to complete the installation.

For Mac: Locate and run "**PhotoViewer.dmg**" inside the "Mac" folder. Next, double-click the "Digital Photo Viewer 1.0.0 MAC OS X" icon on the desktop and select *Install*. Follow the on-screen instructions to complete the installation.

Running Photo Viewer Software

1. Before starting Photo Viewer Software, make sure to connect Pocket Album to your computer with the USB cable.
2. Select **USB Update** on Pocket Album.
3. To run the Photo Viewer Software:
 - a) **For Windows:** Double-click the desktop icon, or browse Programs from the Start Menu.
 - b) **For Mac:** Double-click the desktop icon, or browse Applications from Finder.
4. The Photo Viewer Software screen will open up as shown on the right. The window consists of 2 sections:
 - a) The left section is the **Browser Window**, where you can select and edit the photos to be added to your Pocket Album.
 - b) The right section is the **Device Window**, where you can view and edit the photos that are on your Pocket Album.

NOTE: DO NOT attempt to access Pocket Album on the computer directly as a removable disk. Pocket Album is only accessible via the Photo Viewer Software.


Selecting Images to be Converted:


In the **Browser Window**, browse through the directories on your computer and select the images (JPG or BMP format) you would like to convert. A preview of the selected photo will be displayed.


Mac users: Navigate your iPhoto folder to select your photos.

Editing Images to be Converted:


(PC / Mac)

 **Auto select crop area:** Click to auto select crop area. The crop box represents the maximum crop area of the image. Use the mouse to move the crop area.

 **Manual select crop area:** Click to manually select crop area. To draw crop box, first point the mouse at the starting corner of the target crop area. Next, click and hold the button on your mouse and drag the box out. Release the mouse when the desired crop box is drawn. After the crop box is drawn, you can click and drag it to fine tune the positioning before cropping.


 **Rotate Right:** Click to rotate the image 90° clockwise.

 **Rotate Left:** Click to rotate the image 90° counter-clockwise.


 **Crop:** Click to crop the image. The converted image will be displayed in the **Device Window**.

Pocket Album Photo Viewer Software Screen Overview

Screen Shot - Windows



Screen Shot - Mac

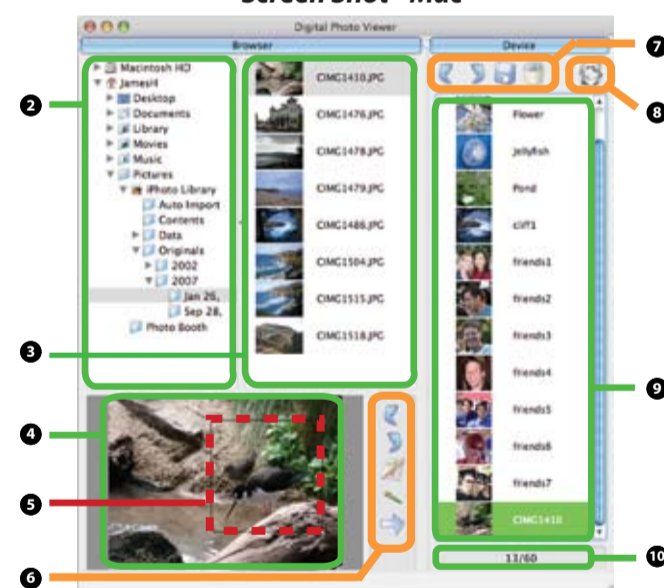


- 1 Selected disk drive on computer
- 2 Folder directory on computer
- 3 Listing of files in selected folder

- 4 Preview of selected file
- 5 Crop area
- 6 Editing options in preview window
- 7 Pocket Album file editing tools

- 8 Synchronize selection with Pocket Album
- 9 Existing images and images ready to be transferred to Pocket Album
- 10 Available memory capacity on Pocket Album
- 11 Upload and download status

Editing Images on Pocket Album (images displayed in the Device Window):

(PC / Mac)


 **Save:** Click to save the selected image to your computer. The image will be saved as a BMP file.

 **Delete:** Click to delete the selected image from Pocket Album.

 **Rotate Left:** Click to rotate the selected image 90° counter-clockwise.

 **Rotate Right:** Click to rotate the selected image 90° clockwise.

Updating Images on Pocket Album:

 **Synchronize:** Click to update your Pocket Album with images displayed in the **Device Window**.

You will see a confirmation message when the images are successfully updated.