

Pocket Album OLED 1.5

1.5" digital photo viewer

Quick Start Guide



DIGITAL FOCI

Thank you for choosing Digital Foci.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ♦ Easy-to-use products to help you manage and enjoy your digital content
- ♦ Attractive products to accentuate your unique style
- ♦ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Pocket Album OLED and other products from Digital Foci, please visit our website at:

www.digitalfoci.com

Congratulations on purchasing your Pocket Album OLED - 1.5" digital photo viewer.

Share and relive your precious photo memories anytime, anywhere with Pocket Album OLED 1.5. Run automatic photo slideshow with adjustable interval and random option. Pocket Album OLED 1.5 runs on rechargeable Lithium-Polymer battery with approximately 5 hours of battery life and can hold 124 mages.

The cutting edge OLED technology displays beautiful pictures from any viewing angle. Pre-load your favorite photos on Pocket Album OLED 1.5 and give it to your friends or family as the perfect sentimental gift.

System Requirements for Photo Manager Software:

- 1) Computer running on:
 - ♦ Windows Vista, XP, 2000
 - ♦ Macintosh OS 10.4 & 10.5
- 2) One available USB Port


Care for Pocket Album OLED:

- ♦ Do not expose Pocket Album OLED to liquids, moisture, or precipitation.
- ♦ Do not drop, jar, bump, shock or expose Pocket Album OLED to severe vibration.
- ♦ Do not store or use Pocket Album in conditions where the temperature is below -22°F (-30°C) or above 158°F (70°C).
- ♦ For best battery life, make sure to periodically recharge your Pocket Album OLED and prevent the battery from becoming completely depleted.

Package Contents:

- ♦ Pocket Album OLED 1.5" with Easy-clip keychain
- ♦ USB cable
- ♦ USB-AC power adapter
- ♦ Resource Disc
- ♦ Quick Start Guide

Device Layout

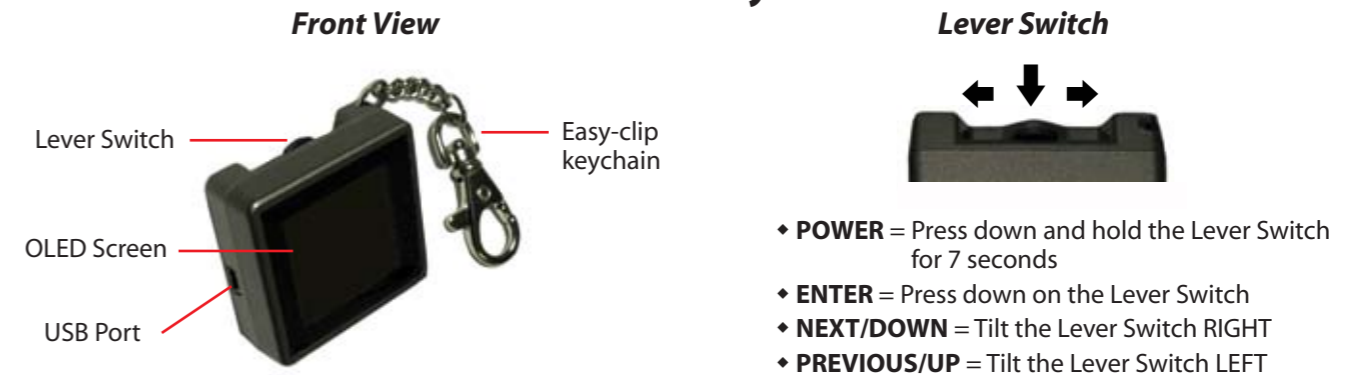

Technical Specifications

Model no.	PAO-150
Display	1.5" OLED (Organic Light-Emitting Diode) Display
Screen resolution	128 x 128 pixels
Viewing area	1.5" diagonal (1.1" x 1.1")
Viewing angle	160 degrees horizontal & vertical
Brightness (cd/m2)	90 nits
Contrast ratio	1,000:1
Image capacity	124 images
Internal memory	32MB
Image format support	JPG,TIF,GIF,PNG,BMP (<i>Note: photos must be transferred from computer via Photo Manager Software</i>)
Slideshow options	Manual slideshow & Auto slideshow
Slideshow intervals	Adjustable from 5 seconds to up to 15 minutes
Random option	Yes
Battery power	Built-in rechargeable Lithium-Polymer battery Rechargeable via USB or USB-AC power adapter
Battery life	Approximately 5 hours
Auto off	Yes (battery saving feature)
Power	AC 110-240V to DC 5V/400mA
Computer interface	USB 1.1
OS compatibility	Windows Vista, XP, 2000; Mac 10.5 & 10.4
Software	Photo Manager Software for converting images
Dimensions	1.8" (L) x 1.8" (W) x 0.7" (H)
Weight	1.4 oz.

Learn More

Visit www.digitalfoci.com to download User's Guide and get answers to Frequently Asked Questions.

Register your Product

Visit www.digitalfoci.com/registration to register your product. You will be notified about any important updates on your Pocket Album OLED.

Technical Support

If you have any questions about using your Pocket Album OLED, please visit www.digitalfoci.com/support or contact tech support by email at: support@digitalfoci.com or call 1-888-NOW-FOCI (669-3624).

Powering On/Off Pocket Album OLED

To turn on Pocket Album OLED, press down on the Lever Switch and hold for 7 seconds until the screen turns on. To turn off the device, press down on the Lever Switch to access the Menu screen. Tilt the Lever Switch to scroll down to **OFF** and select it by pressing down on the Lever Switch.

Charging Pocket Album OLED Battery

Pocket Album OLED has a battery life of about 5 hours on a full charge. You can charge the battery either by the included USB-AC power adapter or by USB power from your computer. It may take up to 5 hours to fully charge Pocket Album OLED when the battery is completely empty. Turn off the device to shorten the charging time. The battery will charge more quickly when the device is turned off.

Charging Pocket Album OLED by USB-AC Adapter

1. Plug the USB-AC power adapter into a wall outlet. The Red LED will light up, indicating it is plugged in.
2. Connect Pocket Album OLED to the USB-AC adapter with the USB cable. The Green LED on the USB-AC adapter will light up, indicating Pocket Album OLED is charging.
3. Pocket Album OLED will automatically turn on. Turn Pocket Album OLED off to make the battery charge faster.

Charging Pocket Album OLED by USB

To charge the Pocket Album OLED battery by USB power, connect the device to your computer with the USB cable. Pocket Album OLED will automatically turn on and the battery icon will flash to indicate it is charging. Turn Pocket Album OLED off to make the battery charge faster.

Viewing Photos on Pocket Album OLED

Operating Lever Switch

- ♦ **ENTER** = Press down on the Lever Switch
- ♦ **DOWN/UP** = Tilt the Lever Switch RIGHT/LEFT

Accessing Device Menu

Press **ENTER** to access the **Main Menu**. Next, press **RIGHT/LEFT** to move the cursor down/up. Press **ENTER** again to make your selection.

- ♦ Select **MENU** to access **MENU OPTIONS** screen.
- ♦ Select **CXL** to cancel and return to photo display.
- ♦ Select **OFF** to turn off Pocket Album OLED.

The **MENU OPTIONS** screen is shown here on the right.

Press **RIGHT/LEFT** to move the cursor (in red text) down/up. Press **ENTER** to select.



MENU OPTIONS - Slideshow

Select **Slideshow** to set the slideshow interval.

Automatic Slideshow:

You can adjust the time interval between each photo from 5 seconds to up to 15 minutes. Photos will advance automatically based on the time interval setting.

You can also change the slideshow interval on-the-fly during a slideshow. While the slideshow is playing, press **RIGHT/LEFT** to increase/decrease the interval.

Manual Slideshow:

Select **Off** under **Slideshow** to turn auto slideshow off. As the photo is displayed on the screen, press **RIGHT/LEFT** to manually scroll to the next/previous photo.

MENU OPTIONS - Random

Select **Random** to turn Random On or Off.

Random On: Select to play photos in random order.

Random Off: Select to play photos in sequential order as organized on *Photo Manager Software*.

MENU OPTIONS - Display

Select **Display** to show or hide File Counter (# of photos on display / total # of photos).

MENU OPTIONS - Timer Off

Select **Timer Off** to set the auto off timer. This is a battery saving feature. If no button has been pressed for 5 minutes (default setting), Pocket Album OLED will automatically turn off. You can adjust the auto off timer to up to 30 minutes. This feature will be temporarily disabled when you are transferring files between your computer and the device. Select **Disabled** under **Timer Off** to disable this feature.

MENU OPTIONS - Delete

To delete a specific photo, access **MENU OPTIONS** and select **Delete** while viewing the photo to be deleted.

The photo to be deleted will be displayed for confirmation. Select **No** to cancel the deletion and select **Yes** to confirm the deletion.

Resetting Pocket Album OLED

In the case that Pocket Album OLED encounters an error and freezes, you can reset it by connecting it to the computer or USB-AC adapter via USB. You will not lose any photos saved on Pocket Album OLED.

Adding Photos to your Pocket Album OLED

Photo Manager Software is the image conversion tool required for transferring photos from the computer to your Pocket Album OLED. The software lets you crop and edit the images before automatically resizing them for optimal storage and display on Pocket Album OLED.

NOTE: Pocket Album OLED cannot be accessed on the computer directly as a removable drive.

Installing Photo Manager Software

Insert and run the Resource Disc on your computer CD-ROM.

For Windows: Locate and run "**PhotoManager.exe**" inside the "Windows" folder. Follow the on-screen instructions to complete the installation.

For Mac: Locate and run "**PhotoManager.dmg**" inside the "Mac" folder. Next, double-click the "**PhotoViewer 4.7.3 MAC OS**" icon on the desktop and select **Install**. Follow the on-screen instructions to complete the installation.

Running Photo Manager Software

IMPORTANT: Before starting Photo Manager Software, you must first connect Pocket Album OLED to your computer with the USB cable. Pocket Album OLED will turn on automatically.

1. Running the Photo Manager Software:
 - a) **For Windows:** Double-click the "**PAO-150 Photo Manager**" icon on the desktop or browse Programs from the Start Menu.
 - b) **For Mac:** Double-click the "**PhotoViewer**" icon on the desktop or browse Applications from *Finder*.
2. The Photo Manager Software screen will open up as shown on the right. There are 2 main sections:
 - a) One section is the **Browser Window**, where you can browse through the photos on your computer, and select and edit the photos to be added to your device.
 - b) The section to the right is the **Staging Area** (or named **Collection Panel** in Mac), where you can organize the photos to be transferred to your Pocket Album OLED.
3. Loading photos from Pocket Album OLED:
 - a) **For Windows:** The photos that are currently on your Pocket Album OLED will automatically load and be displayed in the **Staging Area** (9).
 - b) **For Mac:** Click on **View Photo** (1) to load the photos.

Selecting Images to Convert/Transfer

1. Under **Browse for Images** (3), browse through your computer to select the images you want to transfer. Your current directory path is shown in (2).
- Mac users:** Navigate to **iPhoto folder** to select your photos.
2. As you select different folders, thumbnails of photos in the selected folder will be displayed (5). You can choose (4) to display either the **Whole Image** (in letter box if it is not a square) or select **Fit for Display** (which will crop a square section out of the middle of your photo).
3. Click on the thumbnail of the image you want to transfer, and a preview of the selected photo will be displayed in the **Preview Window** (6).
4. If you would like to add the photo as it is shown in the **Preview Window**, click **Add to Staging Area / Collection Panel** (7) to add it to the **Staging Area** for transfer.


Photo Manager Software Screen Overview

Screen Shot - Windows



- 1 (Mac) Select to load photos from Pocket Album OLED
- 2 Current directory path
- 3 Folder directory on computer
- 4 Select default thumbnail display
- 5 Thumbnails of images in selected folder
- 6 Preview of selected image
- 7 Click to add image to Staging Area as shown in Preview Window
- 8 Click to crop and edit image (Opens Crop Photo Window)
- 9 Staging Area / Collection Panel: images to be transferred
- 10 Remaining memory space available
- 11 (Windows) Arrange photo sequence
- 12 13 Remove selected/all images
- 14 15 Save/load a collection
- 16 Transfer files from Staging Area to Pocket Album OLED

 Screen Shot - Mac

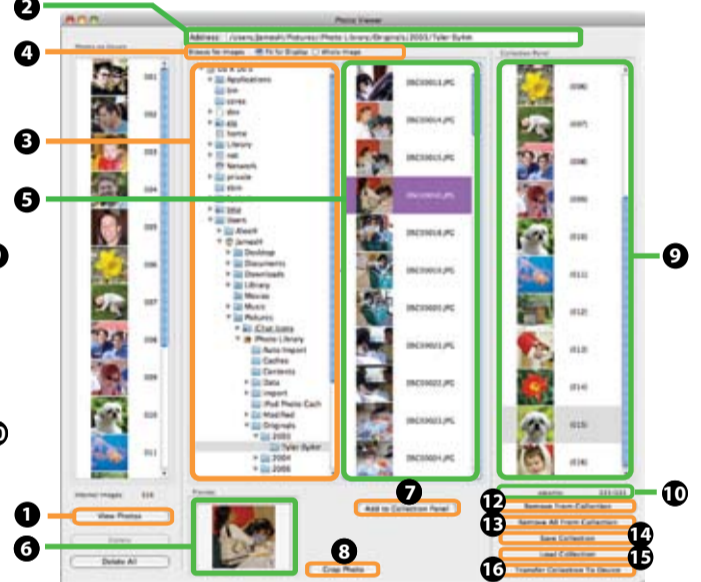

Editing/Cropping Images before Converting

To edit an image, first select it so that it is displayed in the **Preview Window**. Next, click **Edit Photo** (Windows) or **Crop Photo** (Mac) (8) to open up the **Crop Photo Window** as shown on the right.

- ♦ Click and drag one of the corners of the crop box (17) to adjust the size of the crop box.
- ♦ Click and drag the box to move the positioning of the box.
- ♦ Click the rotate buttons (18) to rotate the image.
- ♦ Adjust the brightness and contrast of the image by moving the corresponding scale setting (19).
- ♦ Click **Done** (20) to add the edited image to the **Staging Area**.

Editing Images in the Staging Area

You can remove selected images in the **Staging Area** before transferring them to your Pocket Album OLED.

 
- ♦ Click **Remove selected photo** (Windows) or **Remove From Collection** (Mac) (12) to remove the highlighted photo(s).
- ♦ Click **Remove all photos** (Windows) or **Remove All From Collection** (Mac) (13) to remove all photos from the **Staging Area**.
- ♦ (Windows Only): To arrange the order of the images, highlight an image, and click **<<** / **>>** under **Arrange Sequence** (11) to move that image up / down 1 position.

Saving & Loading Images in the Staging Area

You can also save or load the images as a collection.

- ♦ Click **Save Collection** (14) to save the converted photos as a collection to your computer. This saves all the photos in the **Staging Area** as a single file that you can store for reloading later or loading on another Pocket Album OLED.
- ♦ Click **Load Collection** (15) to load a previously saved collection. You can load more than one collection into the **Staging Area** for transferring to your Pocket Album OLED.

Crop Photo Window

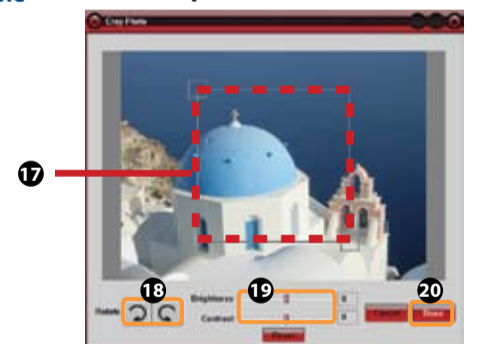

- 17 Crop Box
- 18 Rotate image 90°
- 19 Adjust brightness & contrast
- 20 Add edited image to Staging Area

Updating Images on Pocket Album OLED:

When you are ready to transfer the images shown in the **Staging Area** to your Pocket Album OLED, click **Transfer Photos In Staging Area to Device** (Windows) or **Transfer Collection to Device** (Mac) (16).

Do not disconnect Pocket Album OLED from your computer during the transfer. Please be patient while the images are transferring as it might take several minutes. Once the transfer is complete, you will see a confirmation message, "Download complete. Unplug USB." on the Pocket Album OLED screen. To safely disconnect Pocket Album OLED from your computer:

1. Close Photo Manager Software.
2. Turn off Pocket Album OLED by pressing **MENU** and selecting **OFF**.
3. Disconnect the USB cable.

The new images have been transferred to your Pocket Album OLED.