

Picture Porter Elite

3.6" Portable Photo Storage Viewer
with Memory Card Reader

Quick Start Guide



DIGITAL
FOCI

Thank you for choosing Digital Foci.

Please use this Quick Start Guide to get started with your Picture Porter Elite.

For more detailed explanations on how to use your Picture Porter Elite, refer to the included User's Guide.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- ♦ Easy-to-use products to help you manage and enjoy your digital content
- ♦ Attractive products to accentuate your unique style
- ♦ Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Picture Porter Elite and other products from Digital Foci, please visit our website at:

www.digitalfoci.com

Congratulations on purchasing your Picture Porter Elite - 3.6" Portable Photo Viewer with Hard Drive & Card Reader.

With Picture Porter Elite you can:

- ♦ Carry your collection of digital photos, music, and videos with you and enjoy them anytime, anywhere
- ♦ Save precious vacation pictures directly from digital camera memory cards so you can free up memory card space and keep shooting
- ♦ View photo details with zoom, pan, and rotate functions
- ♦ View EXIF information and histogram of photos
- ♦ Print photos directly to any PictBridge compliant printer without a computer
- ♦ Easily get your set of photos and videos from your friend's and family member's digital cameras
- ♦ Connect Picture Porter Elite to a TV or projector for sharing photos with family and friends on a large display
- ♦ Listen to FM radio
- ♦ Record interviews and meetings with built-in microphone
- ♦ Record videos from TV (and any video source having a RCA output) with scheduled recording function
- ♦ Use Picture Porter Elite as an external hard drive for backing up your computer
- ♦ Copy files directly from Picture Porter Elite to memory cards without needing a computer

Getting Started with Picture Porter Elite

Package Contents:

- ♦ Picture Porter Elite
- ♦ Rechargeable Li-Ion battery
- ♦ AC power adapter
- ♦ USB cable
- ♦ Earphones
- ♦ Audio cable for stereo RCA audio output
- ♦ Video cable for RCA video output
- ♦ Audio/video bus cable for RCA A/V input
- ♦ Remote control
- ♦ Carrying case
- ♦ Wrist strap
- ♦ User's Guide
- ♦ Quick Start Guide
- ♦ Warranty Card

Powering Picture Porter Elite

Installing the Battery

Insert the included Li-Ion battery into the battery compartment located at the bottom-left of Picture Porter Elite. Make sure the gold contacts are inserted headfirst. Do not remove the yellow pull-tab from the battery.

Charging the Battery

For best battery performance, charge the new Picture Porter Elite battery for a full **6 hours**.

Connect Picture Porter Elite to the included AC power adapter to charge the battery.

The red LED will turn on to indicate that the battery is charging. When the battery is fully charged, the LED will turn off.

Power On/Off

To turn on/off Picture Porter Elite, press and hold the Power button for 3 seconds. The green LED will light up to indicate that Picture Porter Elite is powered on.

Low Battery Warning

The green portion of the on-screen battery icon indicates the battery life remaining. When Picture Porter Elite is low on battery, the icon will turn red and continue to decrease. A full red battery icon indicates that the battery is almost completely empty. Finish any operations and safely turn off Picture Porter Elite or supply AC power immediately.

Setting the System Clock

1. Select **Options** from the main menu.
2. Under **SYSTEM** tab, scroll to **Time Zone** and select the time zone of your location.
3. Scroll to **Date Time** and set the proper date and time by changing the values with the + / - buttons.

System Requirements

- 1) Computer running any of the following operating systems:

- ♦ Windows Vista, XP, ME, 2000 (SP3 & higher), 98/SE*
- ♦ Macintosh OS 10.01 & later, 9.0*
- ♦ Linux OS kernel versions 2.4.x & later

(* Device driver installation required for Win 98/SE and Mac 9.0. Please download from www.digitalfoci.com/support.)

- 2) One available USB Port

Supported Memory Card Formats


CompactFlash I/II, MicroDrive, MultiMedia Card (MMC), Secure Digital (SD), Memory Stick, MS PRO, xD-Picture Card (RS-MMC, miniSD, MS Duo, MS PRO Duo with standard adapter)

Supported File Formats


- ♦ Image formats: JPEG, TIFF, BMP, GIF, RAW*
 - ♦ Video formats: MPEG-1, MPEG-4, MJPEG, WMV9
 - ♦ Audio formats: MP3, WMA, AAC, WAV
 - ♦ Document formats: TXT
- (* See www.digitalfoci.com/support for camera models supported.)

Device Layout


Front View

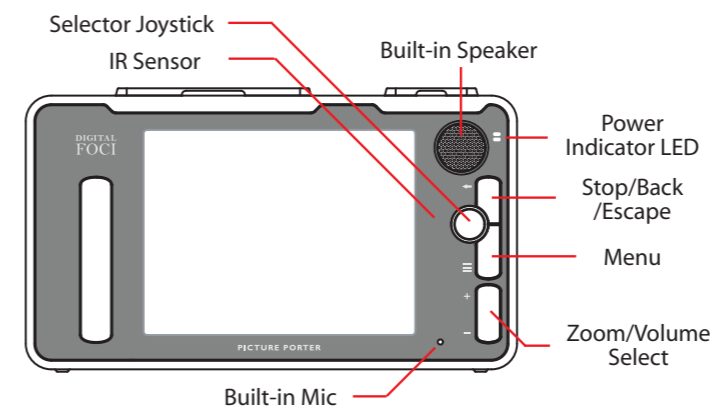


Side View

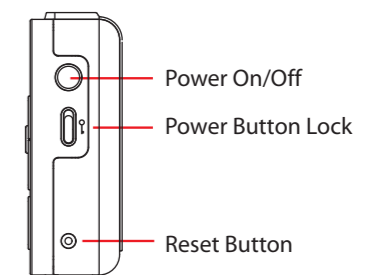

Top View

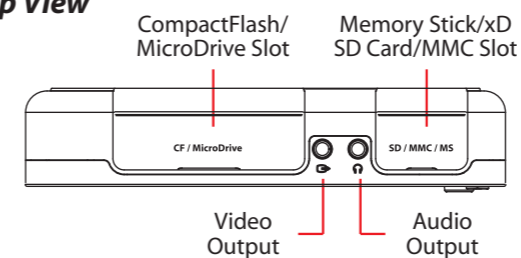


Bottom View

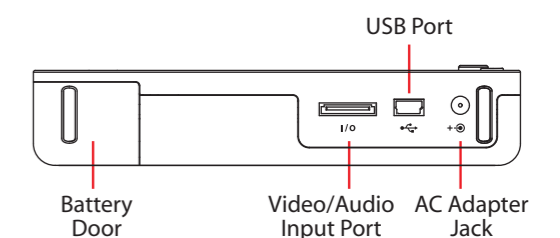

Main Navigation Screen on Picture Porter Elite

Click on the main navigation icons to access different play modes and to enter default folders of your Picture Porter Elite.

Default Folder Structure

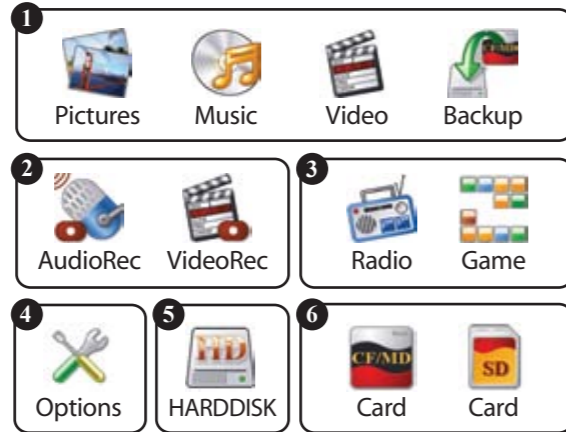


- Shortcuts:** Select to view and access contents of related folders on the hard disk. (See folder diagram to the far left.)
- Recording Tools:** Select to create audio or video files or access previously recorded files. (See folder diagram to the far left.)
- Entertainment Tools:** Select to keep entertained by listening to FM radio or trying your skills at the Matrix game.
- System Setup:** Select to access the SYSTEM, DISPLAY, and VERSION information and available option settings.
- Hard Disk Access:** Select to view, navigate, and access the contents of the internal hard disk.
- Memory Card Access:** Select to view, navigate, and access the contents of inserted memory cards.

Copy Photos from Memory Card to Picture Porter Elite

1. Navigate to the main screen. Insert the memory card into its designated slot with the front of the card facing forward.

Note: Standard adapters required for miniSD, RS-MMC, MS Duo, and MS PRO Duo.

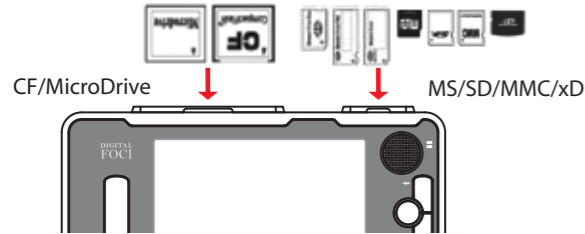

2. Once the memory card is inserted, Picture Porter Elite will display a picture icon of the inserted card on the main screen. It will also prompt you to choose a copy option.

- ◆ Select **Full Backup** (recommended) to copy the entire memory card content with the same folder structure and original file names to Picture Porter Elite.
- ◆ Select **Photo Backup** to copy only the photo and video files (within the DCIM folder created by your digital camera) from the card to Picture Porter Elite. Note that file names might be altered.

3. Select **Yes** to start the backup. Note the name of the folder created for the backup.

4. Upon copy completion, you will see the **Backup Summary**. Select **Compare** to verify that copy task is complete.

5. The created folder and copied contents will be located within the **Backup** folder of Picture Porter Elite.

6. Each 8-character folder name is made up of 2 parts:

- The first few characters are letters that indicate the type of memory card used:


CF = CompactFlash, MicroDrive	SD = Secure Digital
MS = Memory Stick, MS Duo	MMC = MultiMedia Card
MSPRO = MS PRO, MS PRO Duo	xD = xD-Picture Card

- Following the letters are sequential numbers, starting from '0', that indicate the order in which the folder was created.

For example: / **BACKUP** / **CF - 00002** /

CompactFlash Format 3rd folder of this format


Access Your Copied Photos on Picture Porter Elite

 Navigate to and select **Backup** from the main menu to access the photos that you copied from your memory cards. Locate desired backup by the folder names that indicate card type and copy sequence.

View Photos on Picture Porter Elite

To view photos on full screen:

- Navigate to the picture you want to view and press the center of the joystick to display it.
- To see the next photo, tilt the joystick to the right.
- To see the previous photo, tilt the joystick to the left.
- To rotate the photo by 90°, press the center of the joystick.

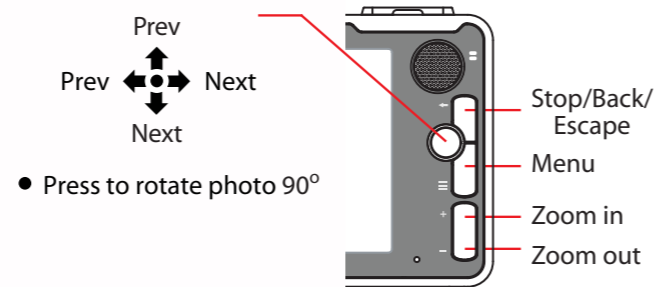

- To zoom a photo, press the **Zoom +** button. As you adjust the zoom, you will see an on-screen 'zoom window' that indicates the level of zoom and the area displayed relative to the entire photo.
- While zooming, you can tilt the joystick in different directions to pan to a specific part of the photo. Press the ← button to return to normal view.

To change photo view mode:

Press the **Menu** button and select **View Mode** to access the view options - *Fit Screen*, *Max Visible*, *Actual Size*, and *Fit Width*. Scroll to the desired view mode and press the center of the joystick to select the option.

To change display setting:

While viewing photos, you can change the display settings:

- ◆ **Show EXIF:** Displays EXIF information and histogram.
- ◆ **Show File Counter:** Displays the sequence of the photo displayed relative to total number of photos in selected folder.
- ◆ **Show Status Bar:** Displays the file name of the photo.

Scroll to the desired display setting and press the center of the joystick to turn each option on or off.

To play a photo slideshow:

- Select and display the first photo of the slideshow you wish to play.
- Press the **Menu** button and select **Slide Show**.
- Select the desired transition effect.
- To increase/decrease the time interval between each photo display, tilt the joystick to the right/left.
- Press the ← button to end the slideshow.

Print Photos from Picture Porter Elite

You can print JPEG photos directly from Picture Porter Elite to any PictBridge compliant printer.

- Turn on Picture Porter Elite and your printer.
- Connect Picture Porter Elite to your printer using the included USB cable.
- On Picture Porter Elite, select **Options** and go to **SYSTEM** tab. Scroll to **USB Mode** and select **PictBridge/Media Mode**.
- Browse to the JPEG photo you would like to print.
- Press the **Menu** button and select **Printer Options** to view or change settings such as paper size and borderless printing.
- To print the photo, press the **Menu** button and select **Print**.

Play Music on Picture Porter Elite

- Navigate to the song you want to play and press the center of the joystick to start playing the song.
- To adjust volume, use the **Volume + / -** buttons.
- To toggle between pause & play, press the center of the joystick.
- To skip to the next song, tilt the joystick down.
- To play the previous song, tilt the joystick up.
- To fast forward/rewind, tilt and hold the joystick to the right/left. Music will resume playing when you release the joystick.
- Press the **Menu** button to access several playback options:
 - ◆ **Playlist:** Show current playlist and select song to play.
 - ◆ **Sequence:**
 - Toggle between *Shuffle On* and *Shuffle Off*.
 - Select among *Repeat All*, *Repeat Single*, and *Play All*.
 - ◆ **Equalizer:** Select equalizer modes or set your own.
 - ◆ **Play in Background:** Hide the jukebox screen display while the music continues to play so you can use the other functions on Picture Porter Elite. To return to the jukebox, press the **Menu** button and select **Jukebox**.
- To stop the music, return to the Jukebox screen display and press the ← button.

Play Videos on Picture Porter Elite

- Navigate to and highlight the video file you want to play.
- Press the center of the joystick to start playing the video file.
- To adjust volume, use the **Volume + / -** buttons.
- To toggle between pause & play, press the center of the joystick.
- To fast forward/rewind, tilt and hold the joystick to the right/left. The video will resume playing when you release the joystick.
- To stop the video, press the ← button.

Copy, Move, and Delete Files/Folders

You can copy and move files/folders on Picture Porter Elite, on or between inserted memory cards, or between Picture Porter Elite and an inserted memory card.

To copy a file/folder:

- Navigate to and highlight the file/folder you want to copy.
- Press the **Menu** button and select **Copy**.
- A confirmation message '*Copied to clipboard*' will pop up. Press the center of the joystick to acknowledge.
- Next, navigate to the folder location where you want to place the copied file or folder.
- Press the **Menu** button and select **Paste**.
- At the confirmation message, '*Paste from clipboard?*' press the center of the joystick to confirm.

To move a file/folder:

You can also move a selected folder or file from its original location to the target location. To do so, follow the same steps as for copy, except select **Cut** instead of **Copy**.

To delete a file/folder:

You can delete an individual file or folder, either from Picture Porter Elite or an inserted memory card.

- Navigate to and highlight the file/folder you want to delete.
- Press the **Menu** button and select **Delete**.
- At the confirmation message, '*Delete file/folder?*' select **Yes** and press the joystick to confirm the deletion.

Use Picture Porter Elite on Your Computer

Once connected to your computer, Picture Porter Elite becomes an external hard drive and memory card reader/writer.

To connect Picture Porter Elite to your computer:

- On Picture Porter Elite, select **Options** and go to **SYSTEM** tab. Scroll to **USB Mode** and select **Mass Storage Device**.

- Connect Picture Porter Elite to your computer with the included USB cable.

Note: It is recommended that you use the AC power adapter when connecting Picture Porter Elite to your computer to ensure sufficient and proper power supply.

Once connected, your computer will recognize* Picture Porter Elite and show 2 removable devices and 1 hard drive.

* Device driver installation is required for computers running Windows 98/SE and Macintosh 9.0. Refer to *Section 5 Driver Installation* in the User's Guide for instructions.

The devices will be listed in this sequence: (*Drive letters may vary*)
 (E:) CF card slot (shown as a removable disk)
 (G:) SD/MMC/MS/xD card slot (shown as a removable disk)
 (I:) Picture Porter Elite hard drive (labeled 'HARDDISK')

You can access these 3 devices just as you would any other storage device on your computer. You can now access files on Picture Porter Elite and the inserted memory cards on your computer, and transfer files between Picture Porter Elite, the inserted memory cards, and your computer.

Read the User's Guide to learn about using your Picture Porter Elite to:

- ◆ Display photos and videos on TV,
- ◆ Listen to and record FM radio,
- ◆ Import music from Windows Media Player,
- ◆ Create on-the-fly playlist,
- ◆ Record audio from built-in mic or line-in audio sources,
- ◆ Record video from TV with scheduled recording,
- ◆ Change system setting, and more.